

# Quick Fixes for your Keyboard and Mouse

brought to you by the



## ▶ CHECK THE PLUG

Make sure the keyboard/mouse is firmly plugged into the back of the computer. You can also try unplugging and reinserting them to the back of your computer.



## ▶ TRY A DIFFERENT SOCKET

If it fails to work on the original socket, plug it into a different one.



## ▶ MAKE SURE IT'S CLEAN

Make sure there is no dirt clogging up the optical laser or roller ball on the underside of your mouse.



## ▶ RESET

If you are using a wireless keyboard/mouse, try pressing the reset button on the device or replace the batteries.

